


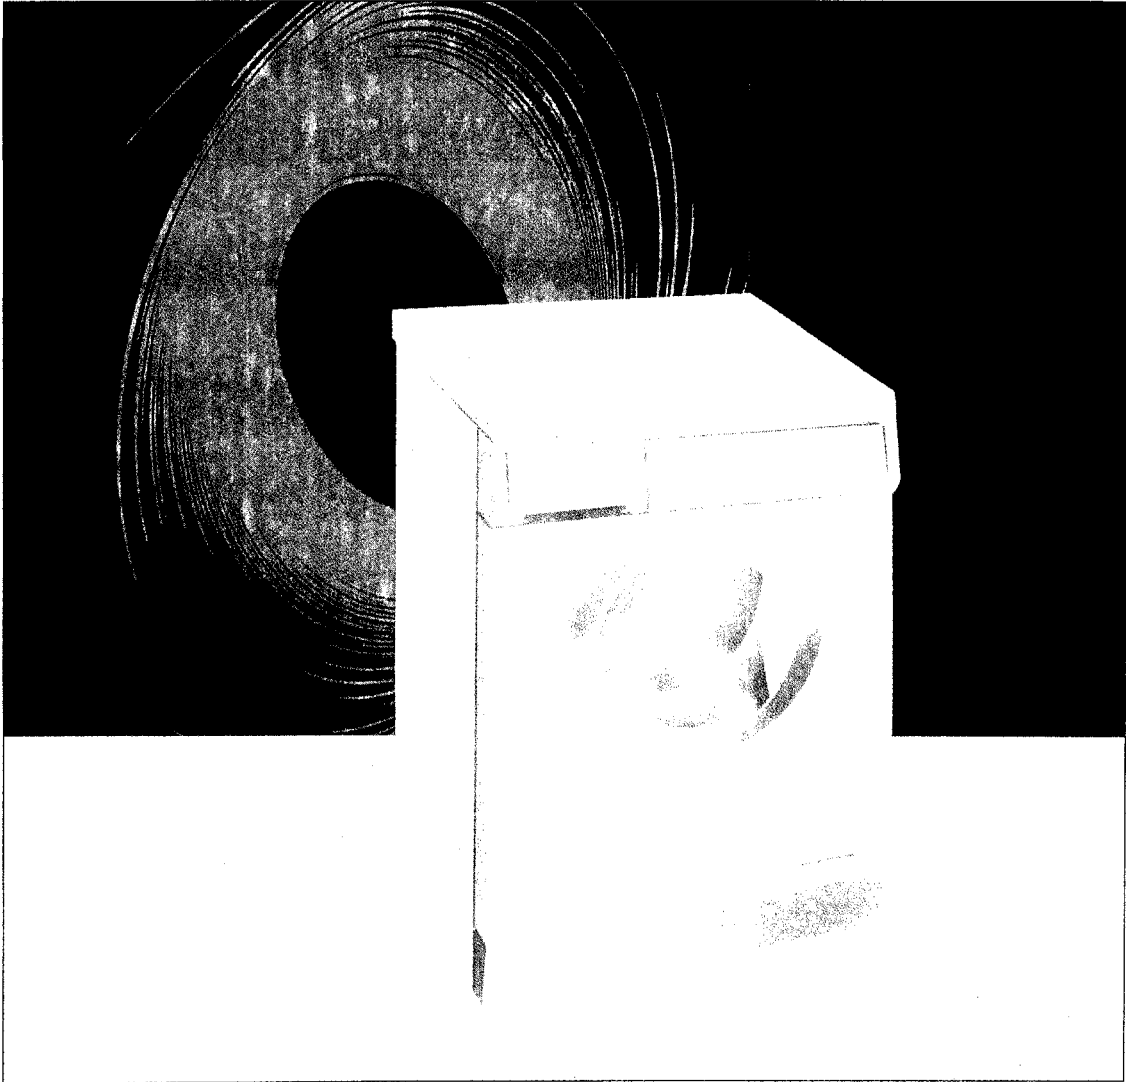

Bauknecht

VOR DEM ERSTEN GEBRAUCH

- **UNBEDINGT „AUFSTELLANWEISUNG“ BEACHTEN.**
- **DIE TRANSPORTSICHERUNG MUSS VOR DER ERSTEN BENUTZUNG ENTFERNT WERDEN.**
- **Erster Waschgang ohne Wäsche:**
 1. Wasserhahn öffnen.
 2. Einfülltür schließen.
 3. Etwas Waschmittel in Kammer  füllen (ca. 100 ml).
 4. Ein kurzes Programm wählen (siehe Programmübersicht).
 5. „Ein/Aus“-Taste drücken.
Damit sind eventuelle Prüfwasserreste vom Testlauf beim Hersteller ausgespült.


FÜR DEN TÄGLICHEN GEBRAUCH:

1. Wasserhahn öffnen.
2. Wäsche nach Gewebeart und Farben sortieren und einfüllen.
3. Einfülltür schließen.
4. Waschmittel und Waschhilfsmittel zugeben.
5. Programm, Temperatur, Zusatzfunktionen wählen.
6. „Ein/Aus“-Taste drücken.

WASSERABLAUF

Anschluß des Ablaufschlauches am Ablauf:

1. Mitgelieferten Krümmer aus der Trommel nehmen und am freien Ende des Ablaufschlauches feststecken.
 2. Ablaufschlauch entweder am Siphon montieren oder mit dem Krümmer über den Rand eines Wasch- oder Spülbeckens einhängen (siehe Bild). Kleine Handwaschbecken sind ungeeignet. Beckenrand darf nicht höher als 1,25 m über dem Fußboden liegen.
- Maximale Abflußhöhe: 1,25 m.
 - Für eine Schlauchverlängerung einen gleichartigen Schlauch verwenden. Die Verbindungsstellen mit Schellen sichern.
 - Gesamtlänge des Ablaufschlauches max. 2,50 m.

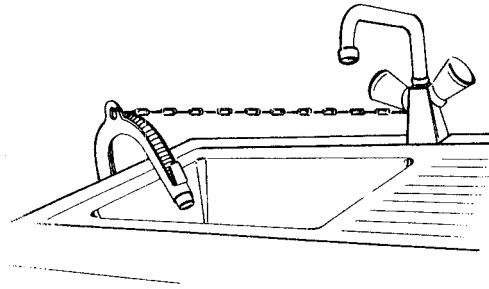

Wichtig:

Ablaufschlauch knickfrei verlegen und während des Betriebs gegen Herunterfallen sichern.

ELEKTRISCHER ANSCHLUSS

- Besondere Vorschriften des örtlichen Elektrizitätswerkes beachten.
- Anschluß darf nur über eine vorschriftsmäßig installierte und geerdete Schutz-Kontakt-Steckdose erfolgen. Die Erdung ist gesetzlich vorgeschrieben. Der Hersteller lehnt jede Verantwortung für eventuelle Schäden an Personen, Haustieren oder Sachen ab, die infolge Nichtbeachtung der o.g. Vorschriften entstehen.
- Angaben über Spannung, Leistungsaufnahme und Absicherung befinden sich auf der Türinnenseite.
- Netzanschlußleitung darf nur vom Fachmann ersetzt werden.
- Keine Verlängerungskabel oder Mehrfachsteckdosen verwenden.
- Das Gerät entspricht den europäischen Sicherheitsbestimmungen, der EG-Richtlinie Nr. 93/68/EWG und EN 60555.
- Bei Anwendung der Schutzmaßnahme „Fehlerstrom-Schutzschaltung“ (d.h. sowohl bei bereits in Ihrer Installation vorhandenem Fehlerstrom-Schutzschalter (FI-Schutzschalter) als auch bei Neuinstallation Ihrer Anlage) darf in Verbindung mit diesem Gerät nur ein **pulsstromsensitiver Fehlerstrom-Schutzschalter** vorgeschaltet werden.

GB

QUICK REFERENCE GUIDE

THE FIRST TIME THE APPLIANCE IS USED:

**NECESSARILY FOLLOW THE "INSTALLATION INSTRUCTIONS"
REMOVE THE TRANSIT BOLTS BEFORE USING THE APPLIANCE.**

- First wash cycle without laundry:
 1. Turn on the tap(s).
 2. Close the appliance door.
 3. Pour a small amount of detergent (about 100 ml) into the detergent and additives drawer .
 4. Select a short programme (see programme chart).
 5. Press the "On/Off" button.


This initial cycle serves to eliminate any water remaining after your appliance was tested in the factory.

NORMAL DAILY USE:

1. Turn on the tap(s).
2. Sort the wash according to fabric type and colour and load the appliance.
3. Close the door.
4. Supply detergent and any additives you intend to use.
5. Select the programme, the temperature and any special functions required.
6. Press the "On/Off" button.

CONTENTS		GB
APPLIANCE AND ACCESSORIES	PAGE 20	
PROTECTING THE ENVIRONMENT	PAGE 21	
SAFETY INSTRUCTIONS	PAGE 21	
TRANSPORT	PAGE 21	
PREPARING THE WASH	PAGE 22	
DETERGENT AND ADDITIVES	PAGES 23 + 24	
DYEING AND BLEACHING	PAGE 24	
SELECTING THE PROGRAMME AND SPECIAL FUNCTIONS / STARTING THE PROGRAMME	PAGE 24 + 25	
DOOR LOCK / PROGRAMME END / PROGRAMME RE-SELECTION	PAGE 25	
TO STOP A PROGRAMME BEFORE THE END / TO INTERRUPT A PROGRAMME	PAGE 25	
REMOVING THE FILTER / DRAINING RESIDUAL WATER	PAGE 26	
CARE AND MAINTENANCE	PAGE 27	
CHILD SAFETY	PAGE 27	
TROUBLE-SHOOTING GUIDE	PAGE 28	
AFTER-SALES-SERVICE	PAGE 29	
INSTALLATION INSTRUCTIONS	PAGES 30–33	

APPLIANCE AND ACCESSORIES

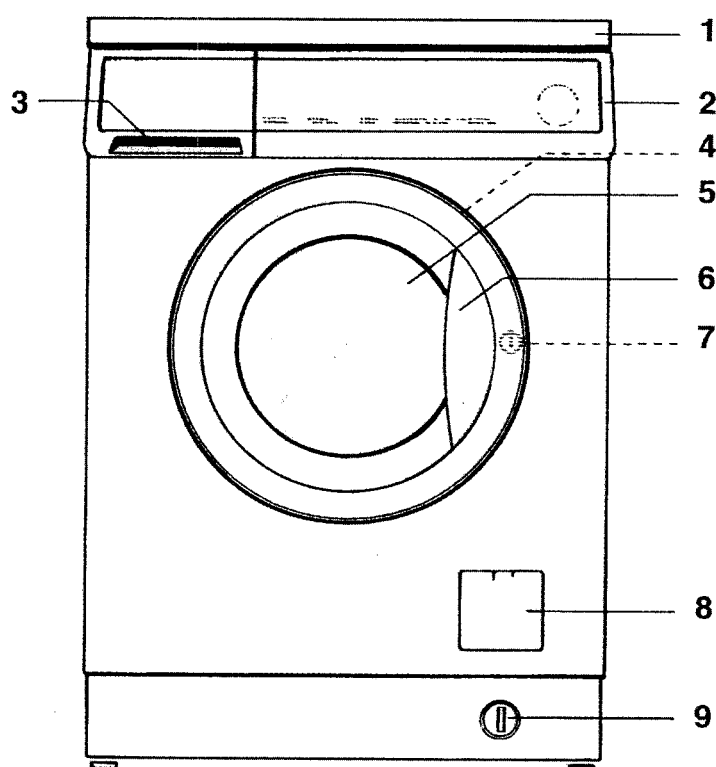

1. Worktop
2. Control panel
3. Detergent and additives drawer
4. After-Sales-Service sticker (inside door)
5. Door
6. Door handle
 - To open the door press the button on the inside of the handle and pull.
 - Close the door by pushing it firmly (the lock will click into place).
7. Child safety lock (inside door)
8. Filter (behind cover)
9. Residual water drain (depending on model)

PROTECTING THE ENVIRONMENT

- **Packing**

The packing material is 100% recyclable as confirmed by the recycling symbol .

- **Appliance**

The appliance is built from recyclable materials. If you decide to scrap the appliance ensure you observe local waste disposal by laws.

Before scrapping, cut off the power cable so the appliance cannot be connected to the mains.

- **Environmental tips**

- If possible, always wash with a full load (depending on the programme) to save water and electricity.
- For lightly to averagely soiled laundry, use a programme without a prewash cycle.
- Use low temperatures or short programmes for lightly soiled laundry.

- Press the “half load” (lightly soiled) button  (depending on model) when washing small loads, and reduce the amount of detergent.
- If you intend to dry the washing in a dryer, select maximum spin speed (depending on the selected programme) to reduce electricity consumption of the dryer.
- Do not exceed the detergent doses indicated in the manufacturers' instructions.
- Use stain removal products or bleach only when strictly necessary.

SAFETY INSTRUCTIONS

- Use the appliance only for domestic washing.
 - Ensure the installation and electrical and water connections have been made in accordance with the Manufacturer's instructions and in observance of local safety regulations (refer to “Installation instructions”).
 - Before cleaning or maintaining the appliance, switch it off or unplug it.
 - When the appliance is not in use unplug it and turn off the tap(s).
 - Do not attempt to force the door open.
 - Do not allow children to play with the appliance or enter the drum. Do not rest any weight on the door.
 - Packing materials can be dangerous for children: keep all packing materials (plastic bags, polystyrene, etc.) well out of their reach.
- The appliance conforms to European safety regulations and to Directive n. 93/68/EEC and standard EN 60555.**

TRANSPORT

1. Unplug the appliance.
2. Turn off the tap(s).
3. Remove the water supply and drain hose.
4. Eliminate all water from the hoses and from the appliance (see “Draining residual water”).
5. Fit the transit bolts (obligatory) (see “Installation instructions”).

PREPARING THE WASH

1. Sort the laundry according to . . .


- **Type of fabric / care label symbol**
Cottons, mixed fibres, synthetics, wool.
- **Colour**
Separate whites and coloureds. Wash new coloured items separately.
- **Size**
Wash items of different sizes in the same load to improve washing action and distribute the load more evenly inside the drum.
- **Fabric Delicacy**
Wash delicate articles separately: use a special programme for Pure New Wool , curtains and other delicates. Always remove curtain glides or wash curtains with the glides inside a cotton bag. Only wash fabrics that are suitable for machine washing. Wash stockings, belts and other small items or articles with hooks (e.g. bras) in special cotton bags for washing machines or in closed pillow cases with zip.

2. Empty pockets

Coins, safety pins and similar can damage your laundry, drum and tub of the appliance.

3. Fasteners

Close zips and fasten buttons or hooks; loose belts or ribbons should be tied together.

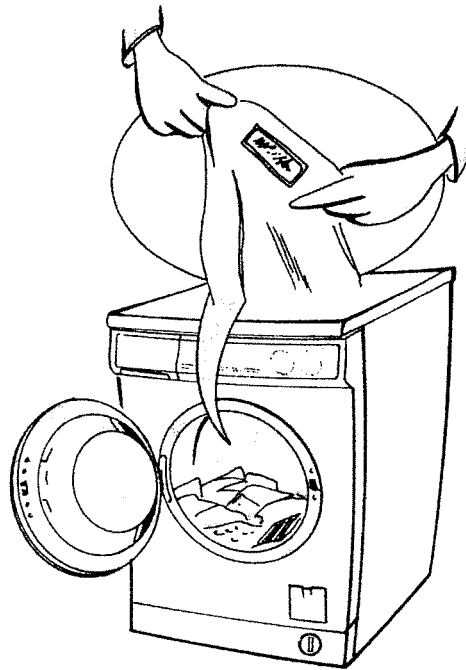

STAIN REMOVAL

- Blood, milk, egg and other organic substances are generally removed by the enzyme phase of the programme.
- To remove red wine, coffee, tea, grass and fruit stains etc. add a stain removing agent in detergent and additives drawer .
- Particularly stubborn stains should be treated before the wash.

LOADING THE LAUNDRY


1. Open the door.
2. Unfold the laundry and place it loosely in the drum.
3. Close the door.

RECOMMENDED LOADS

See separate programme chart.

Note:

Overloading will result in unsatisfactory washing results and creased laundry.

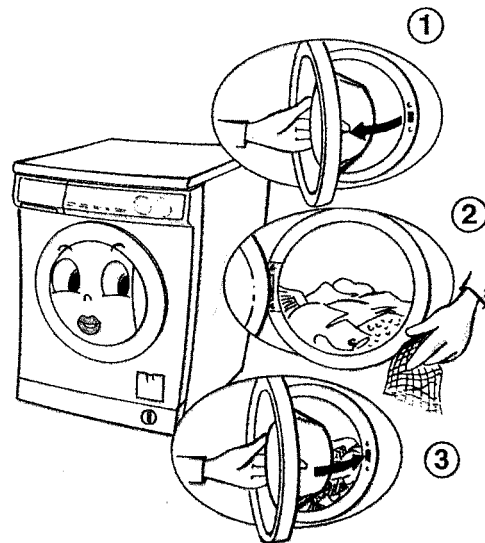

DETERGENT AND ADDITIVES

CHOOSING THE RIGHT DETERGENT

The type of detergent depends on:

- type of fabric (cottons, synthetics, delicate items, wool)

Note:

use only specific detergents for wool.

- colour
- washing temperature
- degree and type of soiling

Notes:

- Whitish residues on dark fabrics are caused by insoluble water softeners used in modern phosphate-free powder detergents. If you notice this problem, shake or brush the affected items or use a liquid detergent.
- Keep detergents and additives in a dry place and out of reach of children.
- Use only detergents and additives specifically produced for domestic washing machines. If you use water softeners, descaling agents, dyes or bleaches, make sure they are suitable for washing machine use.
- Do not use solvents (turpentine, benzine, etc.). Do not machine wash fabrics that have been treated with solvents or inflammable liquids.

DOSAGE

Follow the instructions on the detergent pack in relation to:

- the degree and type of soiling
- the size of the load
 - full load: follow the detergent manufacturer's instructions
 - half load: 3/4 the normal amount used for a full load
 - minimum load (about 1 kg): half the amount used for a full load
- water hardness in your area (ask for information from your water company): soft water requires less detergent than hard water.

Notes:

- Too much detergent can result in excess foam formation, which reduces washing efficiency. If the appliance detects excessive foam it may prevent spinning.
- The laundry will become grey if you use too little detergent. Too little detergent will also lead to increased scale deposits on the heating element and the drum.

WATER HARDNESS

Water hardness class	Characteristics	German scale °dH	French scale °fH	Clarke scale (GB) °eH
1	soft	0–7	0–12	0–9
2	average	7–14	12–25	9–17
3	hard	14–21	25–37	17–26
4	very hard	more than 21	more than 37	more than 26

Adjust the water hardness level marker in the detergent and additives dispenser drawer in accordance with the hardness of the water in your area. Move the marker sideways to the required position.

ADDING DETERGENT AND ADDITIVES


1. Pull out the detergent and additives drawer.

2. Add the detergent

- Programmes with pre and main wash
 - Programmes without pre-wash, main wash only
- When using liquid detergent, remove the coloured insert and fit it in compartment .

The graduated scale on the insert makes dosing easier.

- Fabric softeners etc. (no more than the "max." mark)
- Stain remover agents
- Anti-scale agents (water hardness 4)
- Starch (dissolved in water)

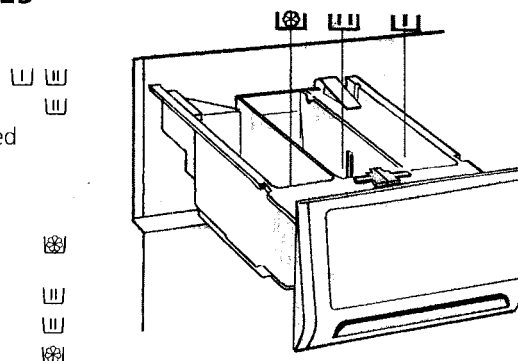

DETERGENT AND ADDITIVES

3. Close the detergent drawer completely.

Notes:

- To prevent dispensing problems when using highly concentrated washing powder, use the special dispenser supplied with the detergent and place it inside the drum.
- You can use liquid detergent in the pre-wash phase for programmes with this special function. Use then only powder detergent for the main wash.
- When using concentrated fabric softeners, add water in the detergent and additives drawer up to the "max." level mark.

DYEING AND BLEACHING

Dyeing: pour the salt directly into the drum.


- Use exclusively dyes and bleaches recommended for washing machines.
- Follow the manufacturer's instructions.
- Plastic and rubber parts of the machine may be stained by dyes or bleaches.

SELECTING THE PROGRAMME AND SPECIAL FUNCTIONS / STARTING THE PROGRAMME

SELECTING THE PROGRAMME

(refer also to the separate programme chart and the power/water consumption data table).

- Turn the programme knob clockwise to the programme required.
The Indicator lamp will come on.
- Turn the thermostat knob to the required temperature (depending on model)
Each programme is automatically assigned a maximum spin speed.

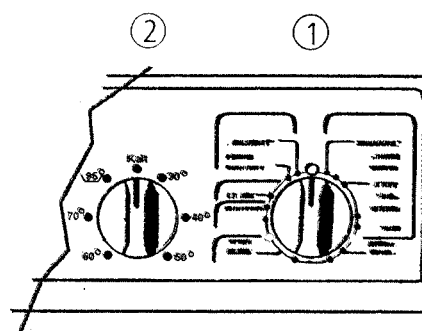

Programme	MAX. SPIN SPEED (RPM) (according to model)							
	1400	1300	1200	1100	1000	900	800	600
Cotton	1400	1300	1200	1100	1000	900	800	600
Synthetics / Easy Care	900*	900*	900*	900*	900*	900	800	600
Delicates	900*	900*	900*	900*	900*	900	800	600
Wool	900*	900*	900*	900*	900*	900	800	600
Rinse + Spin	1400	1300	1200	1100	1000	900	800	600
Spin	1400	1300	1200	1100	1000	900	800	600
Gentle spin	900*	900*	900*	900*	900*	900	800	600

* For improved garment care, spin speed is limited to 900 rpm.

SELECTING THE PROGRAMME AND SPECIAL FUNCTIONS / STARTING THE PROGRAMME

SELECTING SPECIAL FUNCTIONS

(the special functions available depend on the model of your appliance, refer also to the programme chart)

Spin speed reduction button

- Press this button to reduce the automatic maximum spin speed.

Prewash button

- Prewash is not available in conjunction with the "Rapid Wash" function or with short programmes.
- Use the prewash function only for a heavily soiled wash (e.g. sand, stubborn soil).
- The Pre-wash function adds 15 minutes to the programme time.

Rinse Hold button

- The laundry remains in the drum in the rinse water without progressing to the spin cycle to avoid creasing and prevent colours from changing.
- This function is particularly recommended for programmes for wool, synthetics and delicates or if the laundry cannot be removed as soon as the programme comes to an end.
- To terminate the rinse hold function: Press the Rinse hold button again; the programme will terminate automatically with the spin cycle for the preset wash programme.

Energy Save button

- The wash time is extended and the water temperature is reduced.

This function saves about 30% in energy without compromising the excellent results of the wash.

Rapid Wash (Quick Wash) button

- For quick economical washes.
- Ideal for minimum loads of lightly soiled articles.
- There will be only a short spin cycle when you select the "Rapid Wash" function.

Note: when you select the "Rapid Wash" function only the "Rinse Hold" and "Spin speed reduction" functions are available.

1/2 Load (Lightly Soiled) button

- Reduces water consumption, particularly during the rinse cycle.
- Particularly suitable for a lightly soiled wash and for reduced loads. Allows you to reduce also the amount of detergent.

Intensive Rinse button

- Rinse cycle time is extended and the water level increases for improved rinsing action.
- The intensive rinse function is particularly suitable for areas with very soft water and when washing baby linen and helps people with allergies.

STARTING THE PROGRAMME

1. Turn on the tap(s).
2. Press the "On/Off" button.
The "On/Off" indicator light will come on.

DOOR LOCK / PROGRAMME END / PROGRAMME RE-SELECTION

DOOR LOCK

When you start the programme the door is automatically locked until the programme terminates.

If the programme or the power supply is interrupted, the door lock will be automatically released after about 2 minutes.

PROGRAMME END

The programme knob stops on "O".

1. Press the "On/Off" button.
The indicator light will switch off.
2. Cancel the special functions by pressing the relative buttons.

3. Turn off the tap(s).
4. Wait for about 2 minutes for the door lock to be released.
5. Open the door and remove the wash.

Important:

Leave the door slightly ajar so that the drum can dry properly.

PROGRAMME RE-SELECTION

1. Press the "On/Off" button.
The indicator light will switch off.
2. Select a new programme or a different temperature.
3. Press the "On/Off" button again.
The indicator light will come on.

TO STOP A PROGRAMME BEFORE THE END / TO INTERRUPT A PROGRAMME

TO STOP A PROGRAMME BEFORE THE END

1. Press the "On/Off" button.
2. Set the programme selector knob to "Drain".
3. Press the "On/Off" button again.

TO INTERRUPT A PROGRAMME

If you need to interrupt a programme and then restart it later:

1. Press the "On/Off" button.
2. When you want to restart the programme, press the "On/Off" button again.

REMOVING THE FILTER / DRAINING RESIDUAL WATER


WHEN SHOULD I REMOVE THE FILTER?

- Check the filter two or three times a year and clean it if necessary.
- Check the filter if the appliance is not draining properly or if it fails to perform spin cycles.
- Remove the filter if the pump is blocked by an object (buttons, coins, safety pins, etc.).

Important:
Make sure the water has had time to cool before draining the appliance.

REMOVING THE FILTER

1. Switch off the appliance (press the „On/Off“ button).
2. Remove the coloured insert from the detergent and additives drawer and use it to open the filter cover.
3. Place a bowl beneath the filter.
4. Turn the filter slowly anti-clockwise until the grip is vertical; do not extract filter as yet.
5. Wait until all the water has drained out.
6. Now unscrew the filter completely and extract it.
7. Remove any foreign material from the filter.
8. Make sure the pump impeller is not obstructed.
9. Insert the filter and screw it fully down in a clockwise direction (until the grip is horizontal).
10. Close the cover.
11. Pour 0.5 l of water into the detergent and additives drawer to reactivate the „Eco System“.
12. Switch on the appliance by pressing the „On/Off“ button.

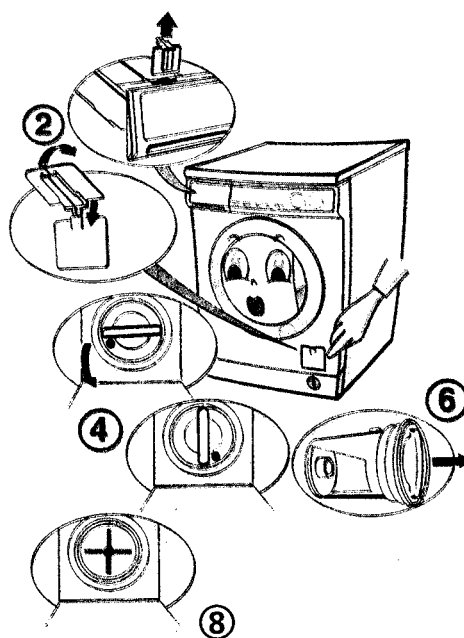

WHEN SHOULD I DRAIN RESIDUAL WATER?


- Before transporting the appliance.
 - If the appliance is installed in a room subject to freezing temperatures, residual water should be drained at the end of each washing session.
- Important: make sure the water has had time to cool before draining residual water.

DRAINING RESIDUAL WATER

(depending on model)

The residual water drain hose is accommodated in the appliance plinth.

1. Unscrew the plastic screw using the thin rounded projection on the coloured insert from the detergent and additives drawer or using a coin.
2. Pull out the drain tube out about a 12 inch length. Remove the cap from the end of the tube.
3. Allow all the water to flow into a bowl, then refit the cap and stow the drain tube back into its compartment.

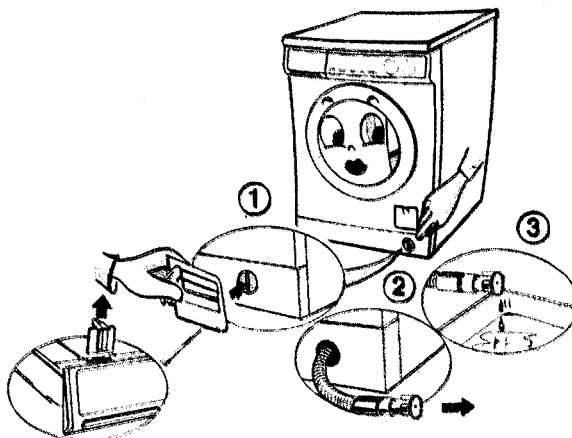

APPLIANCE EXTERIOR AND CONTROL PANEL

- Clean using normal household cleaner (do not use abrasive products).
- Dry with a soft cloth.

DETERGENT AND ADDITIVES DRAWER

1. Disengage the detergent and additives drawer by pressing the release lever in the prewash compartment, and extract it.
2. Remove the inserts (the siphon from the softener compartment and the insert for liquid detergents).
3. Wash all the parts under running water.
4. Replace the parts and refit the detergent and additives drawer. Push the siphon firmly into place.



DOOR SEAL


- Clean with a damp cloth when necessary.
- Check the fold of the seal for foreign objects.

WATER HOSE MESH FILTERS

- Check and clean periodically.
1. Turn off the tap(s).
 2. Unscrew the hose(s) from the tap(s).
 3. Remove the mesh filter and clean it (for appliances with Aqua Stop: only the loose filter).
 4. Refit the filter and screw the hose connection to the tap.
 5. Unscrew the hose(s) from the appliance (not for appliances with Aqua Stop).
 6. Remove the filter from the appliance connection with pliers and clean it.
 7. Refit the filter and screw the hose connection to the appliance.
 8. Turn on the tap(s) to check that the connections are completely watertight.

FILTER

Check the filter two or three times a year and clean it if necessary (see "Removing the filter").

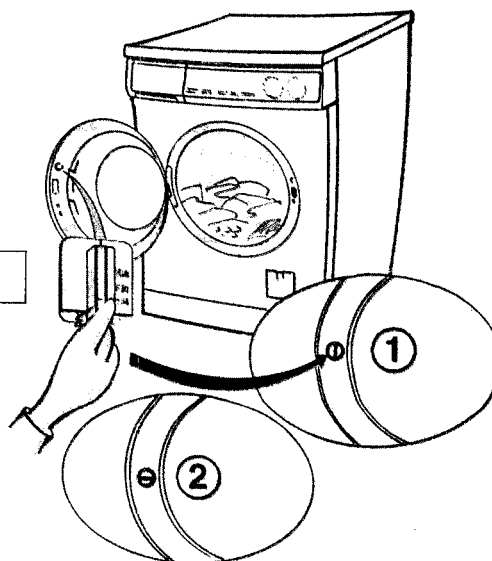

CHILD LOCK

To protect the appliance from improper use, turn the plastic screw on the interior of the door using the thick rounded plastic projection on the coloured insert from the detergent and additives drawer.

1. Slot vertical: safety position, i.e. the door will not lock.
2. Slot horizontal: the door can be locked again

TROUBLE-SHOOTING GUIDE

The appliance fails to start or stops during the programme

Important:

This appliance is equipped with a safety system that stops the programme after few minutes when any of the following conditions is present:

- No water supply.
- Pump blocked.
To restart the appliance, switch it off and then on again.
- Plug properly inserted in mains socket?
- Mains fuse OK?
- Power failure?
- Tap(s) turned on? Water supply OK?
- Door closed properly? Child lock in protect (vertical) position?
- Programme selected?
- "On/Off" button pressed?

No water or insufficient water

- Tap(s) turned on completely?
- Kink in water hose(s)?
- Inlet hose filters clogged?
(see "Care and maintenance")
- Inlet hose frozen?

Waste water not pumped out

- Drain hose installed correctly?
(See "Installation instructions")
- "Rinse hold" function button pressed?
- Filter clogged?
(See "Removing the filter / Draining residual water")

- Water in drain hose frozen?

Detergent and additive product residues in detergent drawer at end of wash

- Siphon installed correctly?
- Siphon clogged?
- Insufficient water supply? (See above)
- See also "Detergent and additives" and "Care and maintenance".

Machine vibrates during spin cycle

- Machine perfectly horizontal with all four feet on ground? (See "Installation instructions")
- Transit bolts removed?
The transit bolts must be removed before using the appliance (see "Installation instructions").

Final spin results are poor

- Pump impeller obstructed?
(See "Removing the debris filter / Draining residual water")
- If the laundry consists of a single heavy/large size article (bathrobe, etc.) the uneven load balancing system may be activated. If the system detects too high load imbalance at the start of a spin cycle, the cycle is interrupted, the wash is redistributed and a new spin cycle is started.

If the system detects too high load imbalance three times in succession, the spin cycle is executed at reduced speed or, in extreme conditions, it is not executed at all.

If the laundry is too wet at the end of the cycle, add smaller articles of laundry to balance the load and repeat the spin cycle.

AFTER-SALES-SERVICE



Before contacting After-Sales-Service:

1. Try to solve the problem (see "Trouble-shooting guide").
2. Restart the programme to see if the fault is repeated.
3. If the malfunction persists, call After-Sales-Service.

Specify:

- The nature of the problem
- The exact model of the appliance
- The service code
(number after the word SERVICE)

SERVICE 0000 000 00000



The After-Sales-Service sticker is on the inside of the door.

- Your full address
- Your telephone number and area code.
- After-Sales-Service phone numbers and addresses are given on the guarantee card. Alternatively, consult the dealer where you purchased the appliance.


INSTALLATION INSTRUCTIONS

TRANSIT BOLTS


The appliance is fitted with transit bolts to prevent internal damage during transport.

Before using the machine you must remove the transit bolts (figure 1).

1. Slacken the bolts with the spanner supplied (see figure 2).
2. Unscrew the bolts by hand.
3. Holding the bolt head, pull each bolt through the wide part of the holes.
4. Close the holes with the plastic covers supplied; insert the covers in the wide part of the hole and slide them toward the narrow part until they click into place (figure 3).
5. Keep the transit bolts for future use.

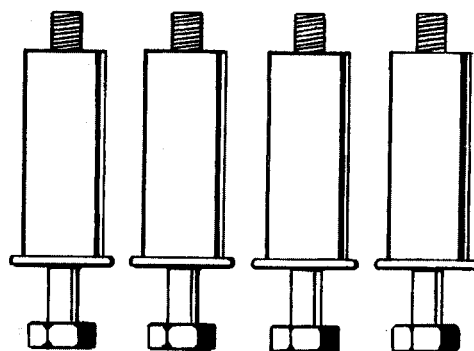


1

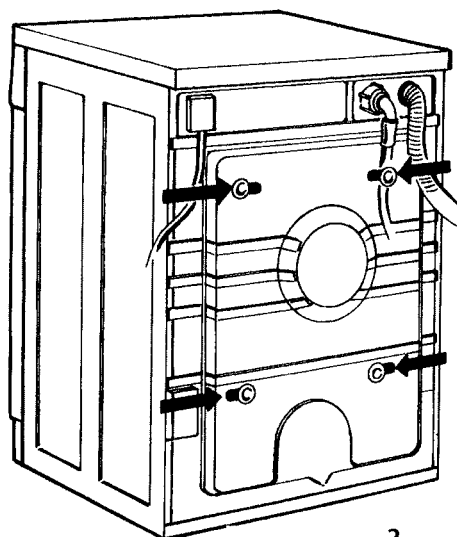

2

Important

Whenever the appliance is transported, the transit bolts must be refitted. Pry up the plastic covers with a screwdriver, slide in the opposite direction to the arrow and remove. Insert and tighten the transit bolts, performing the steps for removal in reverse order.

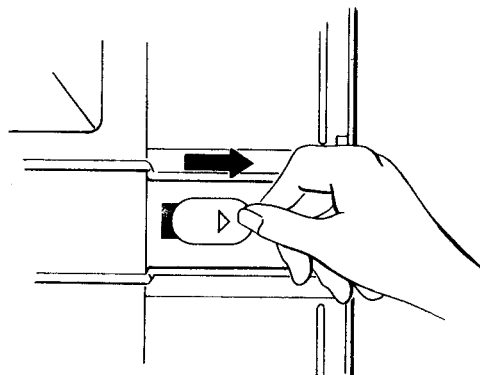


3

INSTALLATION

- Install the appliance on a solid and level floor surface, preferably in a corner of the room.
- Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level (use a spirit level).
- If the floor is uneven, adjust the levelling feet as required (do not insert pieces of wood etc. under the feet).


- ① Slacken the locknut using the spanner supplied.
 - ② Adjust the height of the foot, turning it by hand.
 - ③ Tighten the locknut by turning it anti-clockwise towards the appliance.
- If the appliance is to be installed on a wooden floor, distribute the weight by placing it on a 60 x 60 cm sheet of plywood at least 3 cm in thickness. Secure the plywood sheet to the floor.

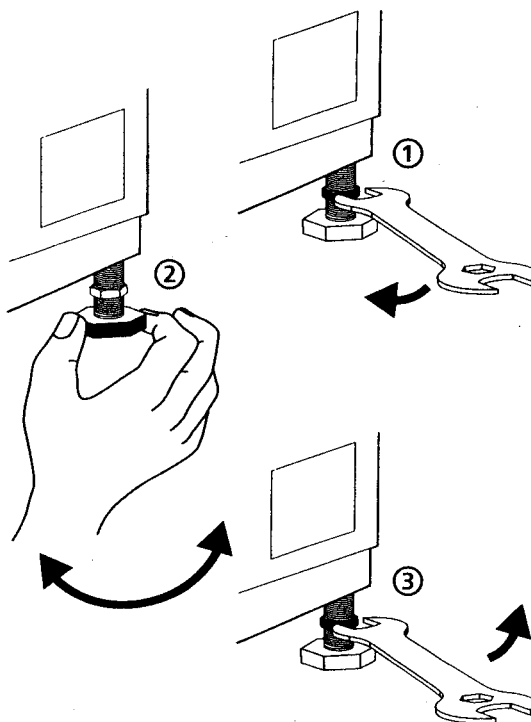

WORKTOP / COVER PANEL

The appliance can be installed under a fitted and only continuous kitchen worktop.

- Unplug the appliance from the mains.
- ① Unscrew the worktop fixing screws from the rear of the appliance.
 - ② Slide the worktop fully backward and lift it upwards to remove. Install the cover panel following the relative instructions.
 - ③ Refit the fixing screws and tighten them.

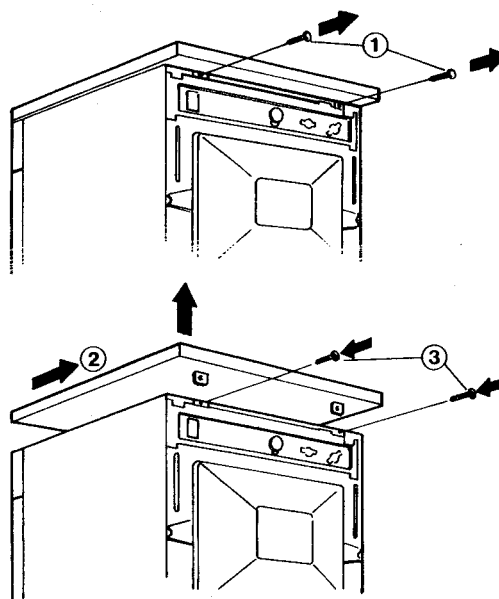

BUILD-UNDER OPENING DIMENSIONS

width 600 mm
height 825 mm
depth 600 mm

Warning:

Only plug the appliance into the mains power socket after you have fitted the cover panel or the appliance worktop.

INSTALLATION INSTRUCTIONS

WATER SUPPLY

- Water supply: cold water only
- Tap: 3/4" threaded hose connection
- Pressure: 10-100 N/cm² (1-10 bar).
- Cold water: not valid for UK, because there the appliances have hot and cold fill.

WATER INLET HOSE(S)

1. The mesh filter supplied with the appliance must be inserted in the connection between the inlet hose(s) and the tap(s).
2. Carefully screw the hose connection(s) to the tap(s) preferably by hand. Make sure there are no kinks in the hose and that it is not crushed.
3. Check water-tightness of tap(s) and appliance connections by turning the tap(s) completely on.
 - If the hose is too short, replace it with a suitable length of pressure resistant hose (10 bar min., EN 50065 approved type).
 - Periodically check the hose for brittleness and cracks and replace if necessary.
 - The appliance can be connected without an anti-backpressure valve.
 - Install the appliance in accordance with regulations of your local water company.

AQUA STOP ANTI-FLOODING SYSTEM

(depending on model)

- The water inlet hose and the plastic enclosure at the tap connection contain electrical components.
- Do not cut the hose and do not immerse the plastic enclosure in water.
- If the flexible hose is damaged, unplug the appliance from the mains immediately.
- If the hose is too short, replace it with a 3 m Aqua Stop hose (available from After-Sales-Service or from your dealer). This operation must be carried out exclusively by a licensed electrician.


DRAINING

Connecting the water drain hose.

1. Remove the "U" bend from the appliance drum and fit it at the end of the drain hose.
2. Connect the drain hose to the siphon or hook it over the edge of a sink by means of the "U" bend (see figure). The drain hose should not be hooked onto small washbasins. The edge of the sink should be no more than 1.25 m (4 ft.) from the floor.
 - Max. drain height: 1.25 m (4 ft).
 - If you need to add an extension, use a flexible hose of the same type and secure the union with screw-on hose clips.
 - Max. drain hose length: 2.50 m (8 ft).

Important:

Make sure there are no kinks in the hose and that it is not crushed. Secure the hose so that it cannot fall down while the appliance is running.

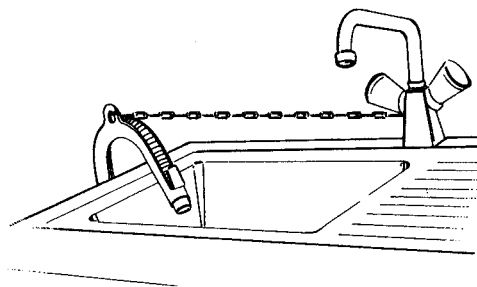


ELECTRICAL CONNECTION

- Electrical connections must be made in accordance with local regulations.
- The appliance must be connected to the mains exclusively by means of a socket with an earth connection in accordance with established regulations. The appliance must be earthed by law. The manufacturer declines all liability for damage to property or injury to persons or animals deriving either directly or indirectly from the inobservance of the above directions.
- Voltage, power consumption and electrical protection data are supplied on the inside of the appliance door.
- The electrical power cable must be replaced, if necessary, exclusively by a licensed electrician.
- Do not use extension leads or adapters.
- The appliance conforms to European safety regulations, EC directive 93/68/EEC and standard EN 60555.

INSTALLATION INSTRUCTIONS

FOR GREAT BRITAIN ONLY

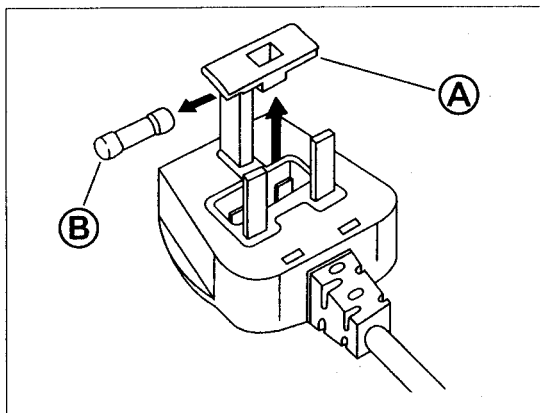

WARNING – THIS APPLIANCE MUST BE EARTHED

Some appliances are supplied with moulded plugs. To change a fuse on this type of plug proceed as follows:


1. Remove fuse cover (A) and fuse (B).
2. Fit new fuse which should be a BS 1362 13A, A.S.T.A.

Important:

- The fuse cover must be refitted after changing a fuse.
- In the event of a fuse cover being misplaced, the plug must not be used until a correct replacement is fitted.
- Please ensure that the replacement fuse cover is of the same colour as the insert or as the colour embossed in words on the base of the plug.

If the moulded plug is not suitable for your sockets it should be cut off and thrown away to avoid any risk of electric shock if it were used in a 13 A socket elsewhere.

A suitable alternative plug should then be fitted to the cable.

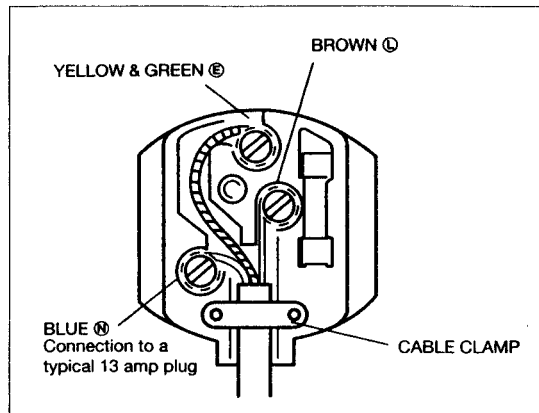

HOW TO CONNECT A PLUG

The wires in this mains lead are colour-coded as follows:

BLUE – NEUTRAL (N)

BROWN – LIVE (L)

GREEN AND YELLOW-EARTH (E)

1. The GREEN AND YELLOW wire must be connected to the terminal in the plug which is marked with the letter "E" or by the Earth symbol $\oplus$, or coloured green or green and yellow.
2. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured black.
3. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured red.

FOR THE REPUBLIC OF IRELAND ONLY

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type. In this case the GREEN AND YELLOW wire must be connected to the EARTH contact and the other two wires to the terminals of the two pins, irrespective of colour.

AVANT LA PREMIERE UTILISATION :

- **RESPECTEZ IMPERATIVEMENT LA NOTICE D'INSTALLATION.**
- **RETIREZ LE BRIDAGE DE TRANSPORT AVANT D'UTILISER L'APPAREIL POUR LA PREMIERE FOIS.**
- **EFFECTUEZ UN PREMIER LAVAGE A VIDE :**
 1. Ouvrez le robinet.
 2. Fermez le hublot.
 3. Versez un peu de détergent dans le compartiment  (environ 100 ml).
 4. Choisissez un programme court (voir le «Tableau des programmes» séparé).
 5. Appuyez sur la touche «Marche/Arrêt».

Ce cycle sert à éliminer l'eau résiduelle due aux contrôles effectués par le fabricant.

POUR L'USAGE QUOTIDIEN :

1. Ouvrez le robinet.
2. Triez le linge suivant le type de textile, la couleur et chargez la machine.
3. Fermez le hublot.
4. Versez le détergent et les produits additifs éventuels.
5. Sélectionnez le programme, la température et les options.
6. Appuyez sur la touche «Marche/Arrêt».

 Cotton with prewash

 Cotton

 Cotton short

 Synthetics with prewash

 Synthetics

 Synthetics short

 Delicate with prewash


 Delicate

 Wool

 Rinse + spin

 Spin

 Delicate spin

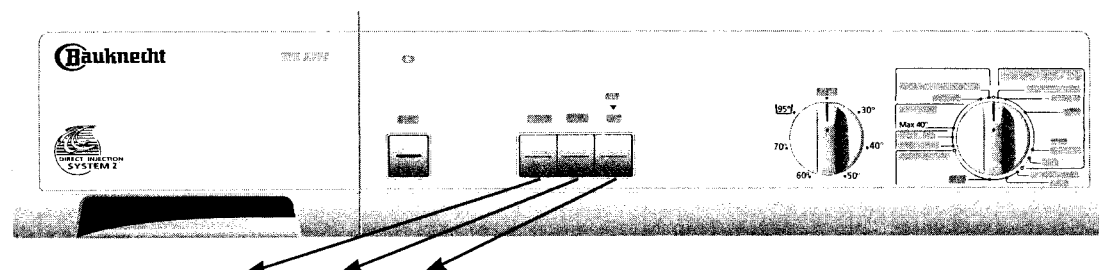 Water drain


Programme		Fabric type / Degree of soiling	Max. load	Detergent and additives			Special functions			Thermostat knob	Programme duration (approx.)	Notes
			kg	Prewash	Main wash	Softener	Energy save	Rinse hold	Spin speed reduction 1000 600	°C	min.	
Cotton with prewash		Heavily soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.	5.0	*	yes	*	*	*	*	from cold to 95	130	
Cotton		Averagely or lightly soiled cottons, bed linen, table linen, underwear, towels, shirts, etc.	5.0	-	yes	*	*	*	*	from cold to 95	115	
Cotton short		Lightly soiled cotton or linen blouses, shirts, dark coloured terry cloth, coloured linen articles, jeans, etc.	5.0	-	yes	*	*	*	*	from cold to 60	90	
Synthetics with prewash		Heavily soiled blouses, shirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends	2.5	*	yes	*	*	*	* 1)	from cold to 60	95	
Synthetics		Lightly or averagely soiled blouses, shirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends	2.5	-	yes	*	*	*	* 1)	from cold to 60	80	
Synthetics short		Lightly soiled blouses, shirts, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or cotton blends	2.5	-	yes	*	*	*	* 1)	from cold to 60	60	
Delicate with prewash		Heavily soiled delicate curtains, dresses, skirts, shirts and blouses	1.5	*	yes	*	-	*	* 1)	from cold to 40	60	
Delicate		Delicate curtains, dresses, skirts, shirts and blouses	1.5	-	yes	*	-	*	* 1)	from cold to 40	45	
Wool		Only machine washable woollens with pure new wool label	1.0	-	yes	*	-	*	* 1)	from cold to 40	40	If you select the special function "Rinse Hold" don't leave garments to soak for too long.
Rinse + spin			5.0	-	-	*	-	*	*	-	-	Programme for treating wash with starch or softener. Terminates with an intensive spin cycle.
Spin			5.0	-	-	-	-	-	*	-	-	Programme for intensive spin cycle, same as the spin cycle in the Cotton programme.
Delicate spin			1.0	-	-	-	-	-	* 1)	-	-	Programme for gentle spin cycle, same as spin cycle in the Wool programme.
Water drain			-	-	-	-	-	-	-	-	-	Drain only without spin cycle. Alternative way of terminating Synthetic, Delicate or Wool programmes after the "Rinse hold".

1) For improved garment care, when you select 1000 rpm the actual speed is restricted to 900 rpm.